



Mounting guide to pipe / truss

ULS Mirror M480 for the Christie DWU23-HS


By using the lens 140-114107-XX T.R: 0.84-1.02:1


1. Mount two half couplers to the projector base plate MHB-5501
2. Mount the 4x M8 x 15 spacers to the projector.
3. Place the projector base plate MHB-5501 in position **A** on it.
4. Fasten the 4x M8 x 14 Socket screws.

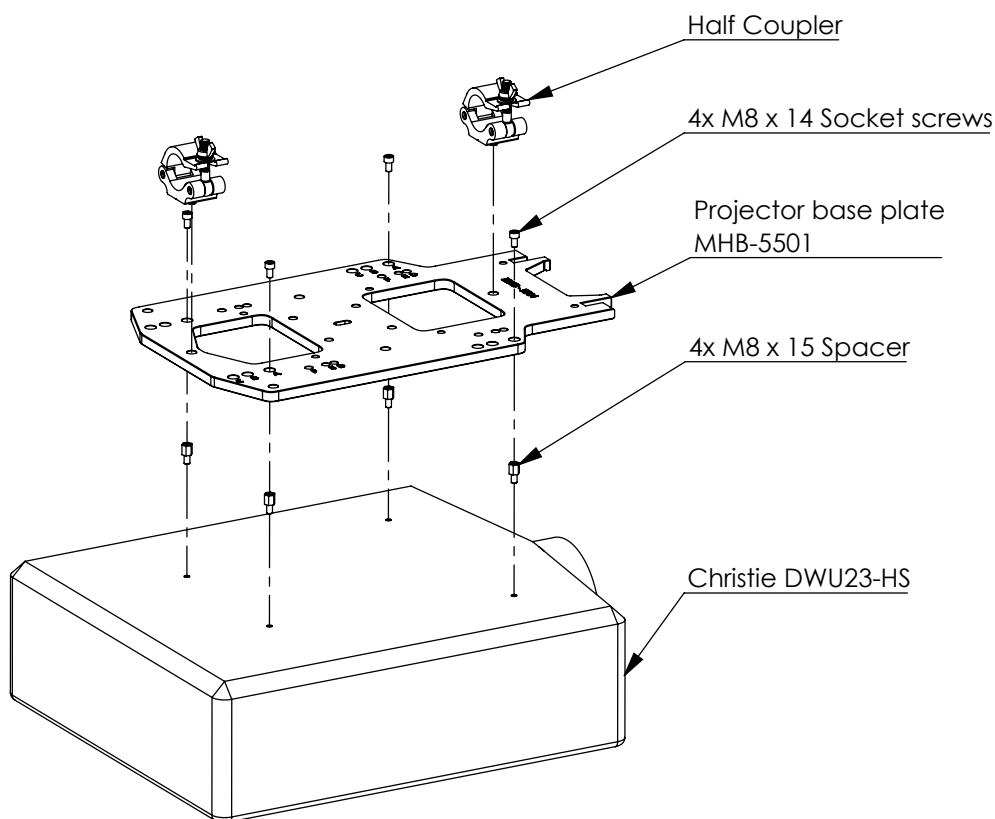

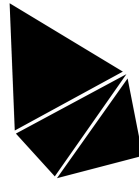



5. Mount the ULS base plate to the projector base plate MHB-5501 and fasten 2x M6 x 10 and 2x M6 x 25 socket screws.

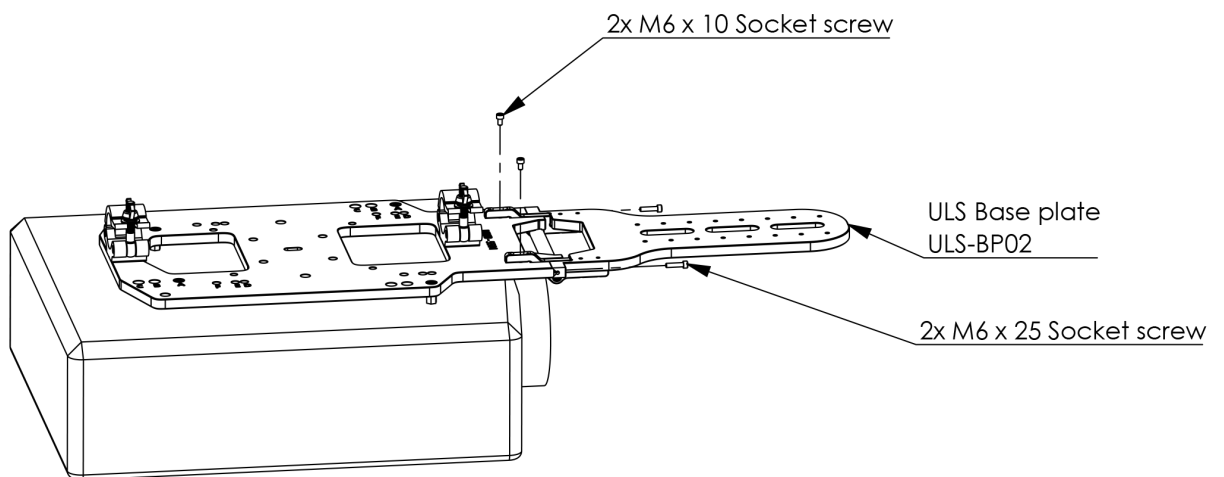

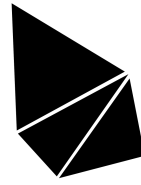



6. Mount the ULS Pole P088 in the first position (1) using the 4x M6 x 16 countersunk screws as shown below.

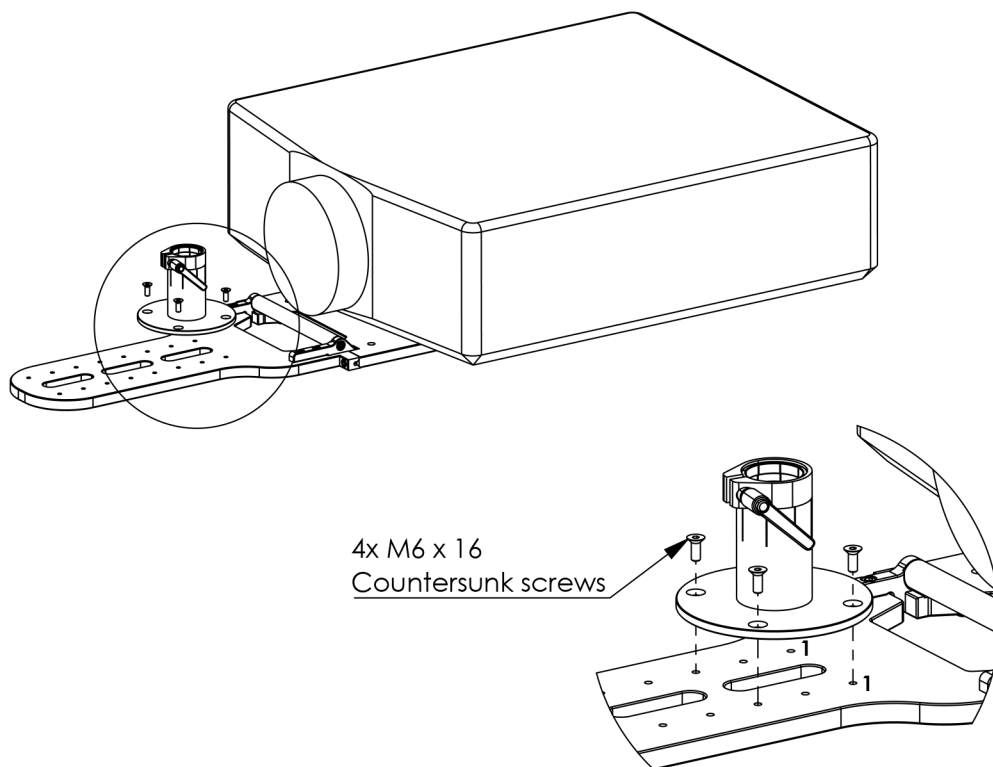

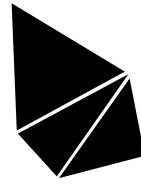



7. Mount the ball head in the position and orientation using 4x M4 x 10 lens head screws as shown below.
8. Mount the handles using the 4x M6 x 16 socket screws.

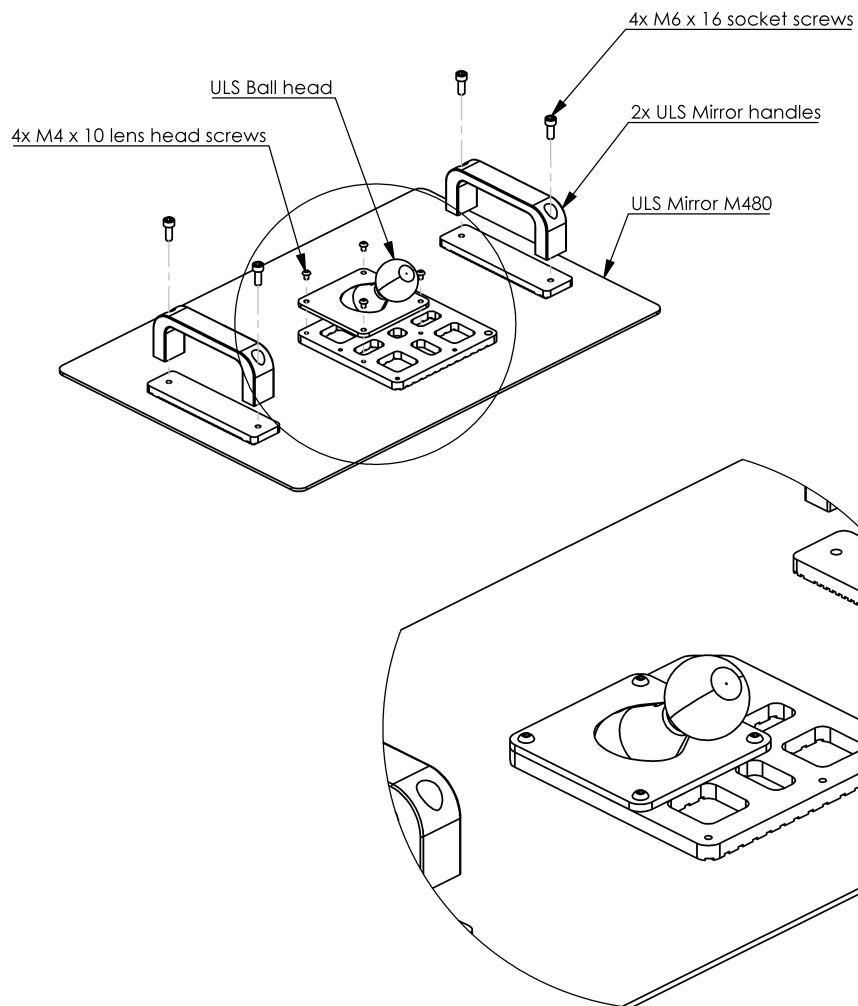

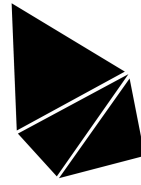


9. Mount the fixture to the pipe / truss system by using half coupler.
Notice: The Vertical center of projection is the middle of the image.

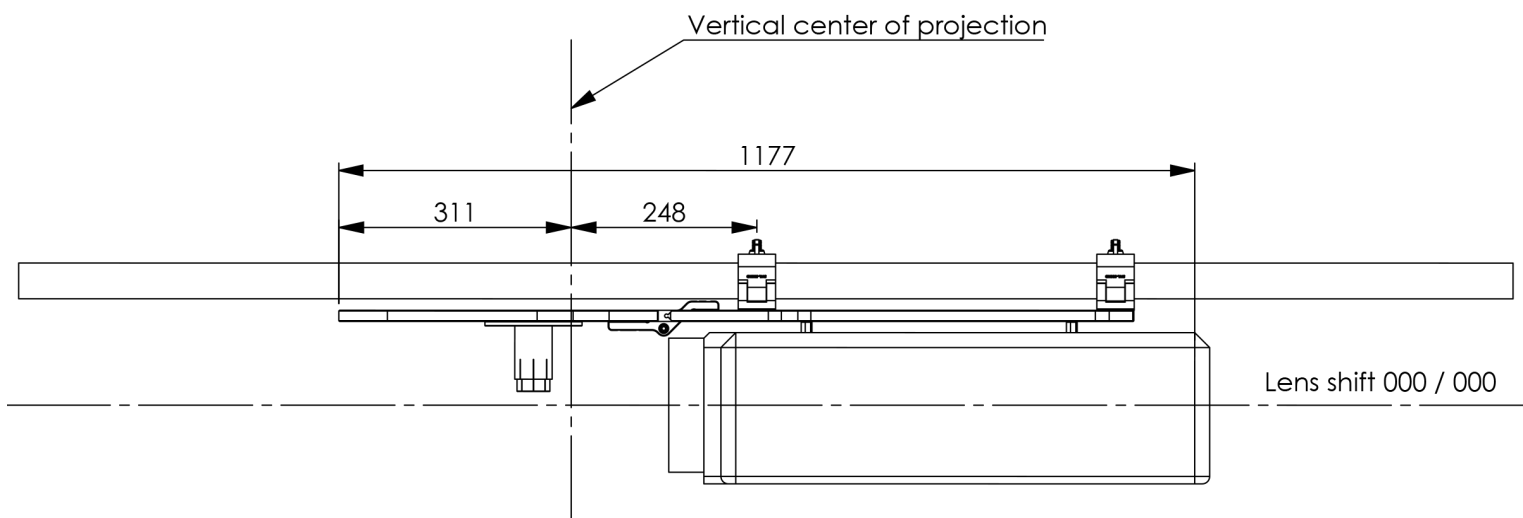


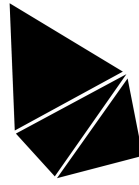

10. Mount the Mirror into the Pole.

Place the ring clamp over the ball head, push the ball head in the ULS Pole ball socket and secure the position with the locking lever.

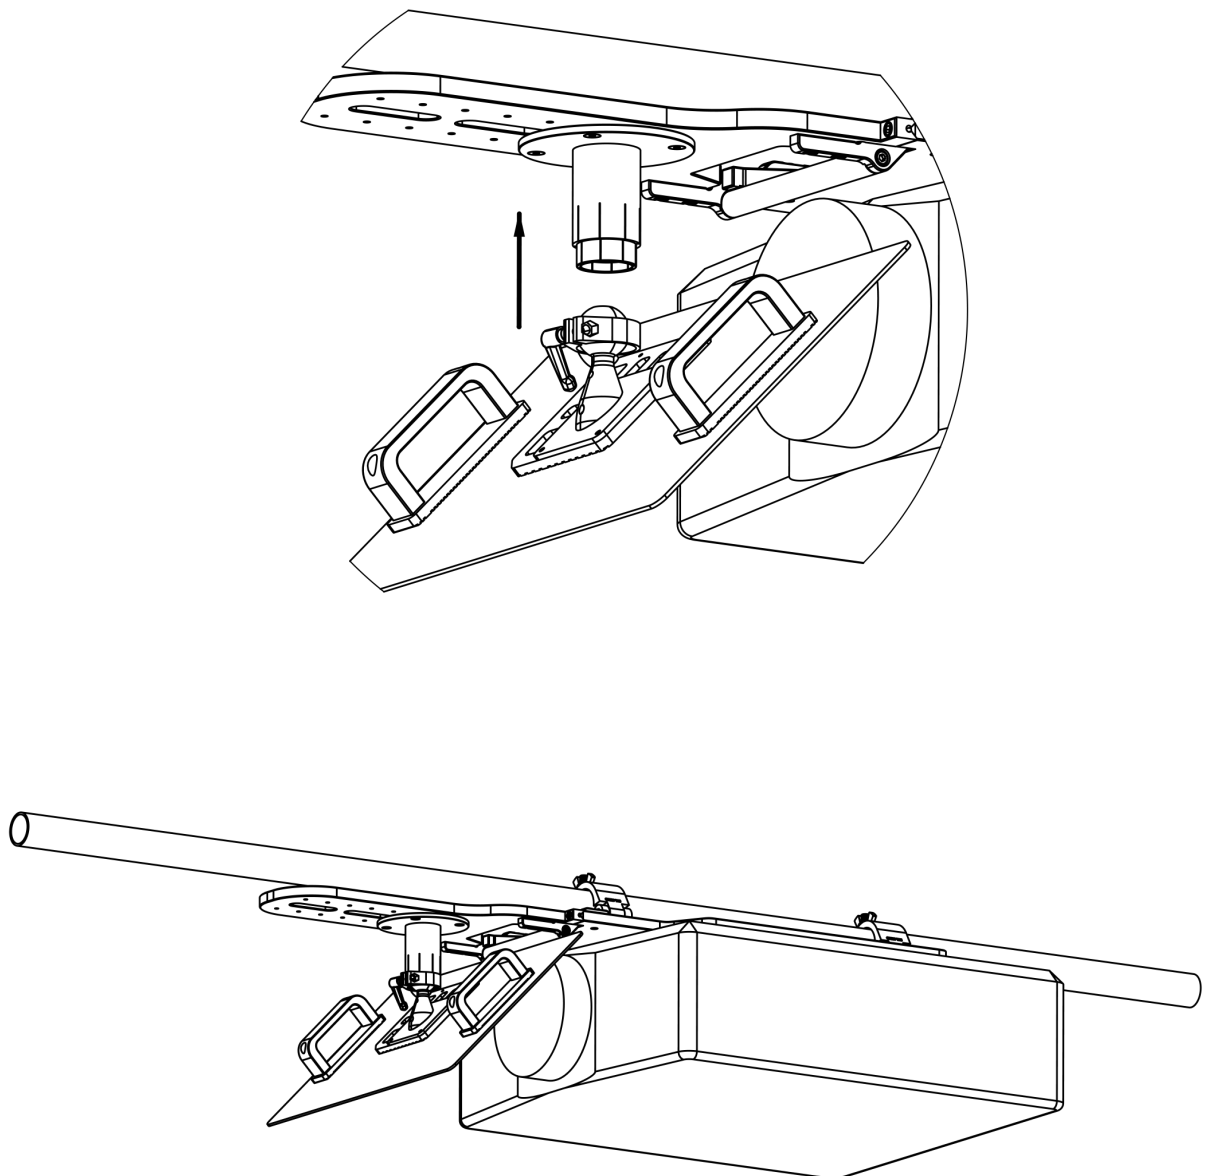

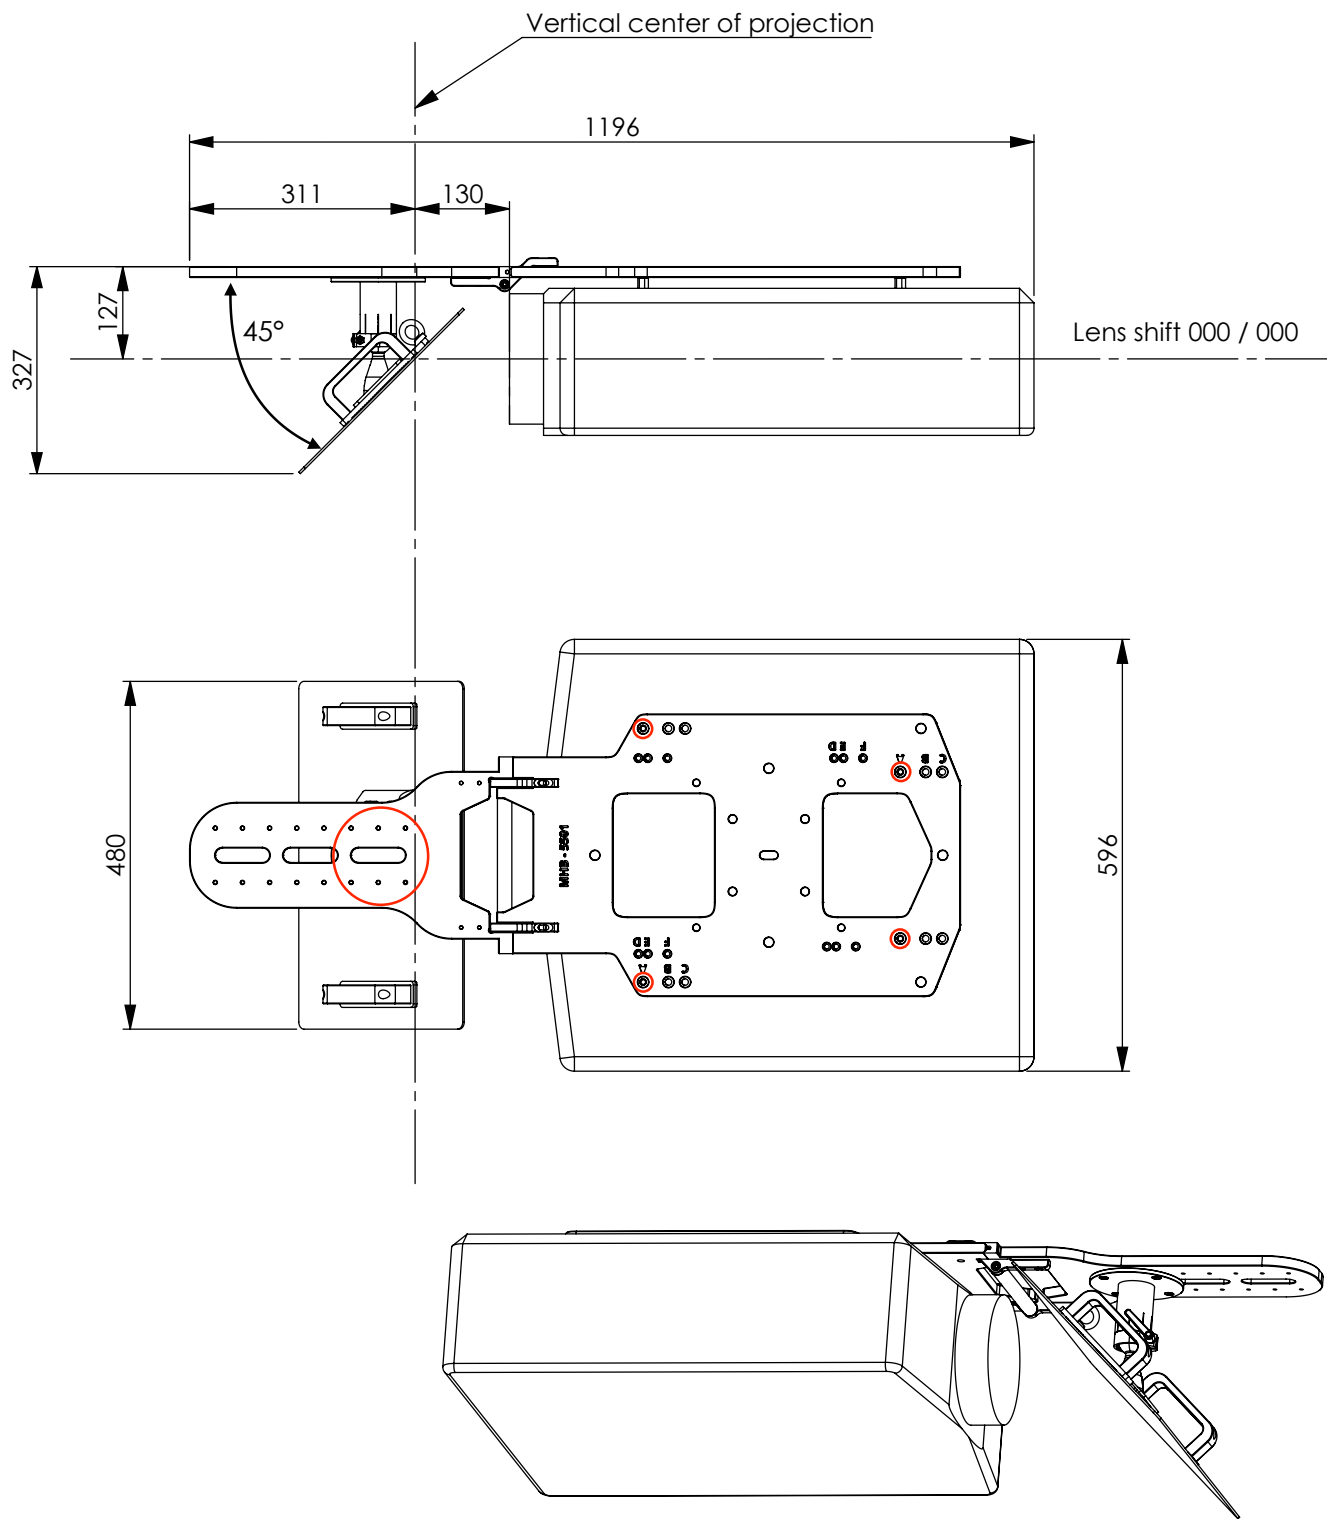

Mirror Size M480 = 480 x 320 mm

WENN NICHT ANDERS DEFINIERT: TOLERANZEN: DIN ISO 2768-1 m		ROHTEIL:		ENTGRATEN UND SCHARFE KANTEN BRECHEN		ZEICHNUNG NICHT SKALIEREN		ÄNDERUNG	
						 DYNAMIC PROJECTION INSTITUTE Copyright (c) 2014-2024 by Dynamic Projection Institute Herstellungs und Vertriebs GmbH. All Rights Reserved.			
NAME		SIGNATUR		DATUM		BENENNUNG: ULS-MB-4808 + Christie DWU23-HS with Lens 140-114107-XX T.R: 0.84-1.02:1			
GEZEICHNET		Stokic		31.07.2024					
GEPRÜFT									
GENEHMIGT									
PRODUKTION									
QUALITÄT						ZEICHNUNGSNR.		A4	
						DPI-ULS-MB-4808_Christie_DWU23-HS_140-114107-XX			
						MASSSTAB:1:10		BLATT 1 VON 1	
				GEWICHT:					